

Matrix F Series F12/F22/F32/F42/F62/F82

New Royal Mail postal tariff and services


Royal Mail Postage Rate Change

1. Connecting franking system with network




Make sure that the network connection is first set up correctly.

2. Select Account

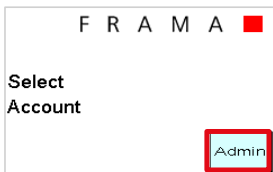


Press "Admin" button in bottom right hand corner of screen.

3. Enter PIN

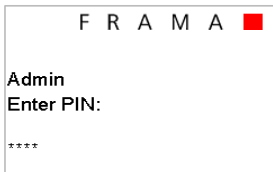


Enter your PIN (1234) and confirm with "OK" button.

4. Selecting further information

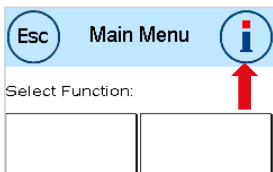


Main Menu: Press the "i" key in the top right of screen.

5. Select spanner option

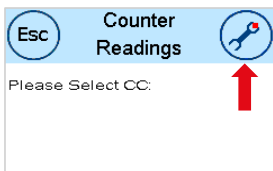


Counter Readings: Select the spanner in the top right of screen.

6. Open Menu "Setup 2"

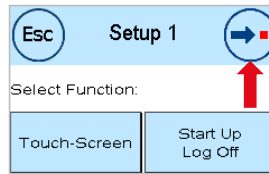


Menu Setup 1: Press the arrow top right.

7. Select "FramaOnline2"

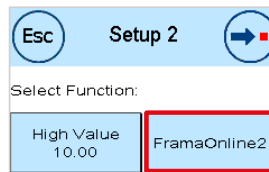


Menu Setup 2: Select "FramaOnline2" bottom right of screen.

8. Selecting "Inspection"

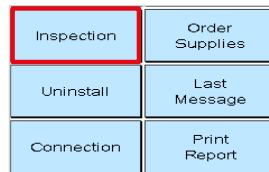

Menu FramaOnline2: Select "Inspection" in the top left of screen.

9. Confirming Inspection

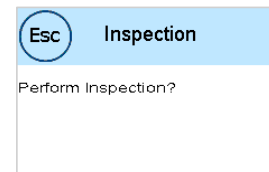

Menu Inspection: Confirm the question on the screen with "YES" button.

10. Finish Inspection



When the screen shows the message "Inspection successful", please touch the screen to continue.

NOTE: Mail franked with the incorrect tariff could be subject to a Royal Mail surcharge and administration fee.



Authorised independent inspector and maintainer of franking machines

We go **Beyond Mailing**

Call 0800 652 9178 ratechange@themailingroom.com www.themailingroom.com



The Mailing Room